



Instruction Manual

2022 and ERT9 series

Pneudraulic Installation Tools

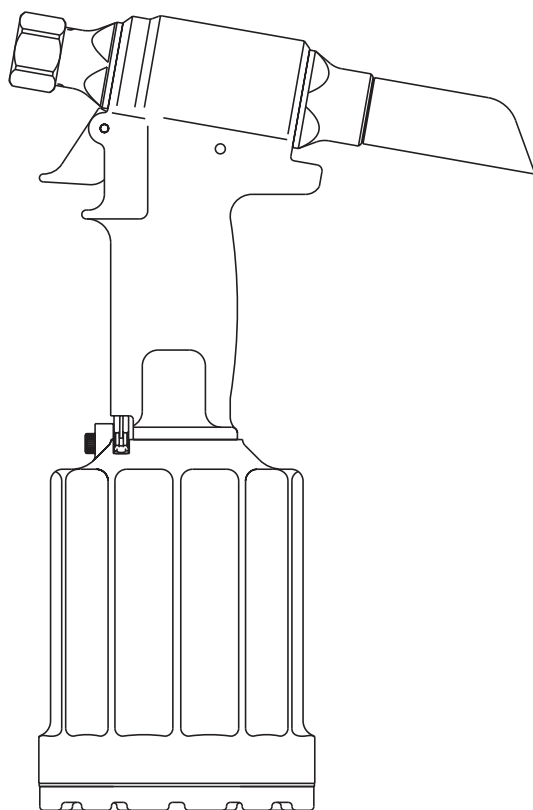


Table of Contents

Declaration of Conformity	2
Safety Instructions	3
Specifications	4-6
Principle of Operation	7
Preparation for Use	7
Operating Instructions	8
Maintenance	8
Disassembly Instructions	9-10
Assembly Instructions	11-12
Fill and Bleed	13
Measuring Tool Stroke	14
Components Drawings	14-17
Kits and Accessories	18
Troubleshooting	18



**HOWMET
AEROSPACE**

Declaration of Conformity

Manufacturer:

Huck International, LLC, Industrial Products Group, 1 Corporate Drive, Kingston, NY, 12401, USA

Description of Machinery:

Models 202, 202#, ERT9 & ERT9# family pneudraulic installation tools and specials based on their design (e.g. PR#####).

Relevant provisions complied with:

Council Directive related to Machinery (2006/42/EC)

Supply of Machinery (Safety) Regulations 2008

British Standard related to hand held, non-electric power tools (ISO 11148-2:2011)

Representatives:

UK: Paul Carson, Huck International, Ltd. Unit C Stafford Park 7, Telford Shropshire TF3 3BQ, England, United Kingdom

EU: Lutz Baumann, Hildesheim Operations, Fairchild Fasteners Europe - VSD GmbH, Steven 3, 31135, Hildesheim, Germany

Authorized Signature/date:

I, the undersigned, do hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Signature:

Full Name: Nicholas Gougoutris

Position: Engineering Manager

Location: Huck International, LLC d/b/a Howmet Fastening Systems
Kingston, New York, USA

Date: 11/02/2021 (November 2, 2021)



Declared dual number noise emission values in accordance with ISO 4871

A weighted sound power level, LWA: **81** dB (reference 1 pW) Uncertainty, KWA: 3 dB

A weighted emission sound pressure level at the work station, LpA: **70** dB (reference 20 µPa) Uncertainty, KpA: 3 dB

C-weighted peak emission sound pressure level, LpC, peak: **115** dB (reference 20 µPa) Uncertainty, KpC: 3 dB

Values determined according to noise test code ISO 3744. The sum of a measured noise emission value and its associated uncertainty represents an upper boundary of the range of values which is likely to occur in measurements.

Declared vibration emission values in accordance with EN 12096

Measured Vibrations emission value, a: **.57** m/s²

Uncertainty, K: **.28** m/s²

Values measured and determined according to ISO 28662-1, ISO 5349-2, and EN 1033

Test data to support the above information is on file at:
Howmet Fastening Systems, Kingston Operations, Kingston, NY, USA.



Safety Instructions

GLOSSARY OF TERMS AND SYMBOLS:



-Product complies with requirements set forth by the relevant UK and European directives.



-Read manual prior to using this equipment.



-Eye protection is required while using this equipment.



-Hearing protection is required while using this equipment.

Notes: are reminders of required procedures.

Bold, Italic type, and underline: emphasize a specific instruction.



WARNINGS: Must be understood to avoid severe personal injury.



CAUTIONS: Show conditions that will damage equipment or structure.

I. GENERAL SAFETY RULES:

1. A half hour long hands-on training session with qualified personnel is recommended before using Howmet equipment.
2. Howmet equipment must be maintained in a safe working condition at all times. Tools and hoses should be inspected at the beginning of each shift/day for damage or wear. Any repair should be done by a qualified repairman trained on Howmet procedures.
3. For multiple hazards, read and understand the safety instructions before installing, operating, repairing, maintaining, changing accessories on, or working near the assembly power tool. Failure to do so can result in serious bodily injury.
4. Only qualified and trained operators should install, adjust or use the assembly power tool.
5. Do not modify this assembly power tool. This can reduce effectiveness of safety measures and increase operator risk.
6. Do not discard safety instructions; give them to the operator.
7. Do not use assembly power tool if it has been damaged.
8. Tools shall be inspected periodically to verify all ratings and markings required, and listed in the manual, are legibly marked on the tool. The employer/operator shall contact the manufacturer to obtain replacement marking labels when necessary. Refer to assembly drawing and parts list for replacement.
9. Tool is only to be used as stated in this manual. Any other use is prohibited.
10. Read MSDS Specifications before servicing the tool. MSDS specifications are available from the product manufacturer or your Howmet representative.
11. Only genuine Howmet parts shall be used for replacements or spares. Use of any other parts can result in tooling damage or personal injury.
12. Never remove any safety guards or pintail deflectors.
13. Never install a fastener in free air. Personal injury from fastener ejecting may occur.
14. Where applicable, always clear spent pintail out of nose assembly before installing the next fastener.
15. Check clearance between trigger and work piece to ensure there is no pinch point when tool is activated. Remote triggers are available for hydraulic tooling if pinch point is unavoidable.
16. Do not abuse tool by dropping or using it as a hammer. Never use hydraulic or air lines as a handle or to bend or pry the tool. Reasonable care of installation tools by operators is an important factor in maintaining tool efficiency, eliminating downtime, and preventing an accident which may cause severe personal injury.
17. Never place hands between nose assembly and work piece. Keep hands clear from front of tool.
18. Tools with ejector rods should never be cycled with out nose assembly installed.
19. When two piece lock bolts are being used always make sure the collar orientation is correct. See fastener data sheet for correct positioning.

II. PROJECTILE HAZARDS:

1. Risk of whipping compressed air hose if tool is pneudraulic or pneumatic.
2. Disconnect the assembly power tool from energy source when changing inserted tools or accessories.
3. Be aware that failure of the workpiece, accessories, or the inserted tool itself can generate high velocity projectiles.
4. Always wear impact resistant eye protection during tool operation. The grade of protection required should be assessed for each use.
5. The risk of others should also be assessed at this time.
6. Ensure that the workpiece is securely fixed.
7. Check that the means of protection from ejection of fastener or pintail is in place and operative.

8. There is possibility of forcible ejection of pintails or spent mandrels from front of tool.

III. OPERATING HAZARDS:

1. Use of tool can expose the operator's hands to hazards including: crushing, impacts, cuts, abrasions and heat. Wear suitable gloves to protect hands.
2. Operators and maintenance personnel shall be physically able to handle the bulk, weight and power of the tool.
3. Hold the tool correctly and be ready to counteract normal or sudden movements with both hands available.
4. Maintain a balanced body position and secure footing.
5. Release trigger or stop start device in case of interruption of energy supply.
6. Use only fluids and lubricants recommended by the manufacturer.
7. Avoid unsuitable postures, as it is likely for these not to allow counteracting of normal or unexpected tool movement.
8. If the assembly power tool is fixed to a suspension device, make sure that fixation is secure.
9. Beware of the risk of crushing or pinching if nose equipment is not fitted.

IV. REPETITIVE MOTION HAZARDS:

1. When using assembly power tool, the operator can experience discomfort in the hands, arms, shoulders, neck or other parts of the body.
2. When using tool, the operator should adopt a comfortable posture while maintaining a secure footing and avoid awkward or off balanced postures.
3. The operator should change posture during extended tasks to help avoid discomfort and fatigue.
4. If the operator experiences symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensations or stiffness, these warnings should not be ignored. The operator should tell the employer and consult a qualified health professional.

V. ACCESSORIES HAZARDS:

1. Disconnect tool from energy supply before changing inserted tool or accessory.
2. Use only sizes and types of accessories and consumables that are recommended. Do not use other types or sizes of accessories or consumables.

VI. WORKPLACE HAZARDS:

1. Be aware of slippery surfaces caused by use of the tool and of trip hazards caused by the air line or hydraulic hose.
2. Proceed with caution while in unfamiliar surroundings; there could be hidden hazards such as electricity or other utility lines.
3. The assembly power tool is not intended for use in potentially explosive environments.
4. Tool is not insulated against contact with electrical power.
5. Ensure there are no electrical cables, gas pipes, etc., which can cause a hazard if damaged by use of the tool.

VII. NOISE HAZARDS:

1. Exposure to high noise levels can cause permanent, disabling hearing loss and other problems such as tinnitus, therefore risk assessment and the implementation of proper controls is essential.
2. Appropriate controls to reduce the risk may include actions such as damping materials to prevent workpiece from 'ringing'.
3. Use hearing protection in accordance with employer's instructions and as required by occupational health and safety regulations.
4. Operate and maintain tool as recommended in the instruction handbook to prevent an unnecessary increase in the noise level.
5. Select, maintain and replace the consumable / inserted tool as recommended to prevent an unnecessary increase in noise.
6. If the power tool has a silencer, always ensure that it is in place and in good working order when the tool is being operated.

VIII. VIBRATION HAZARDS:

1. Exposure to vibration can cause disabling damage to the nerves and blood supply to the hands and arms.
2. Wear warm clothing when working in cold conditions and keep hands warm and dry.
3. If numbness, tingling, pain or whitening of the skin in the fingers or hands, stop using the tool, tell your employer and consult a physician.
4. Support the weight of the tool in a stand, tensioner or balancer in order to have a lighter grip on the tool.

IX. PNEUMATIC / PNEUDRAULIC TOOL SAFETY INSTRUCTIONS:

1. Air under pressure can cause severe injury.
2. Always shut off air supply, drain hose of air pressure and disconnect tool from air supply when not in use, before changing accessories or when making repairs.
3. Never direct air at yourself or anyone else.
4. Whipping hoses can cause severe injury, always check for damaged or loose hoses and fittings.
5. Cold air should be directed away from hands.
6. Whenever universal twist couplings (claw couplings) are used, lock pins shall be installed and whip-check safety cables shall be used to safeguard against possible hose to hose or hose to tool connection failure.
7. Do not exceed maximum air pressure stated on tool.
8. Never carry an air tool by the hose.



Specifications

STROKE: 1.026 in (2.61 cm)

WEIGHT: 5.4 lbs (2.45 kg)

MAX AIR PRESSURE: 90 psi (6.2 bar)

MAX FLOW RATE: 8.5 scfm (241 l/min)

POWER SOURCE: 90 psi (6.2 bar) maximum shop air

MAX OPERATING TEMP: 125° F (51.7° C)

PULL CAPACITY: 3477 lbs @ 90 psi
(15.5 kN @ 6.2 bar)

SPEED / CYCLES: 30 per minute




HOSE KITS: Use only genuine Howmet Hose Kits rated @ 10,000 psi (689.5 bar) working pressure.

HYDRAULIC FLUID: Hydraulic fluid shall meet DEXRON® III, DEXRON VI, MERCON®, Allison C-4 or equivalent Automatic Transmission Fluid (ATF) specifications. Fire-resistant fluid may be used if it is an ester-based fluid such as Quintolubric® HFD or equivalent. Water-based fluid shall NOT be used as serious damage to equipment will occur.

DEXRON is a registered trademark of General Motors Corp.


MERCON is a registered trademark of Ford Motor Corp.

Quintolubric is a registered trademark of Quaker Chemical Corp.

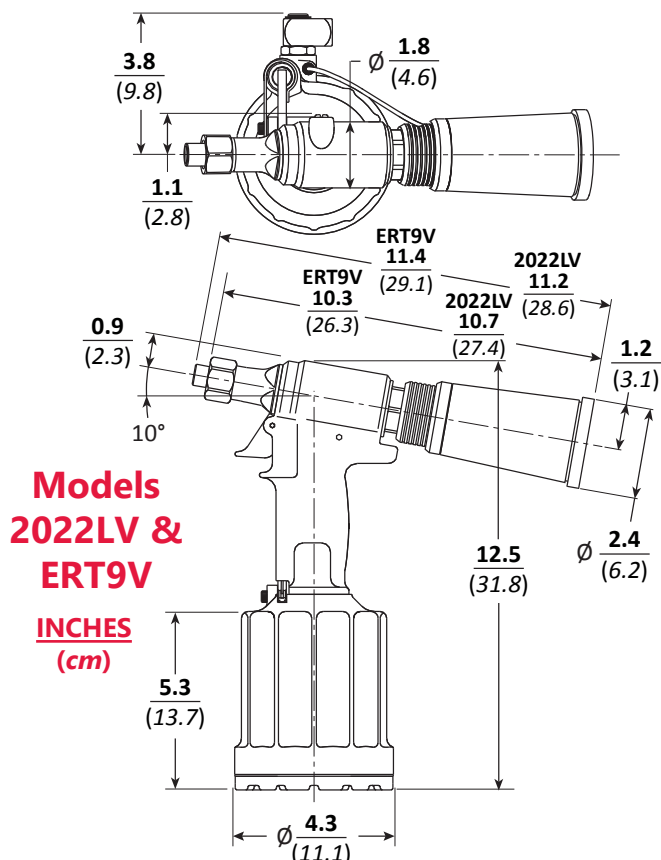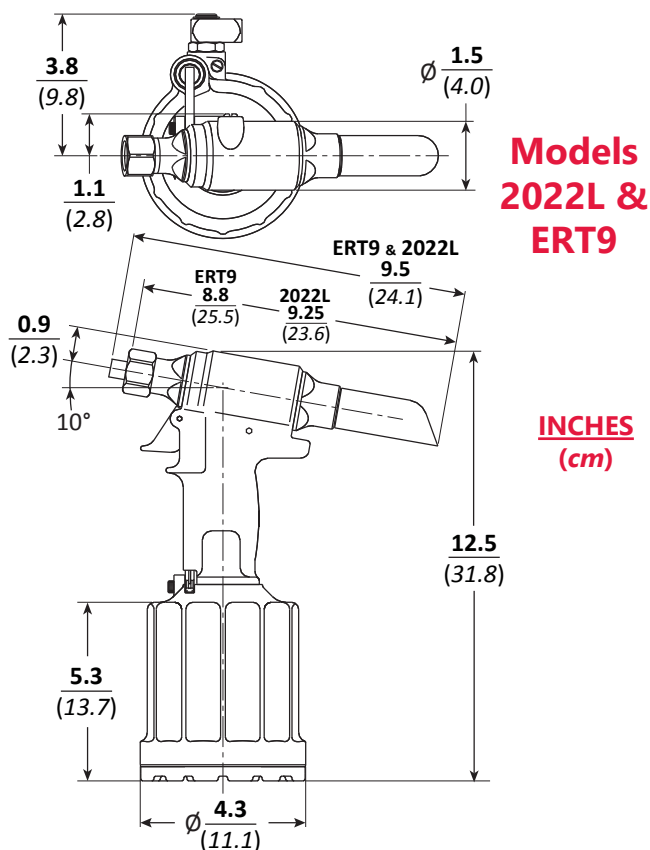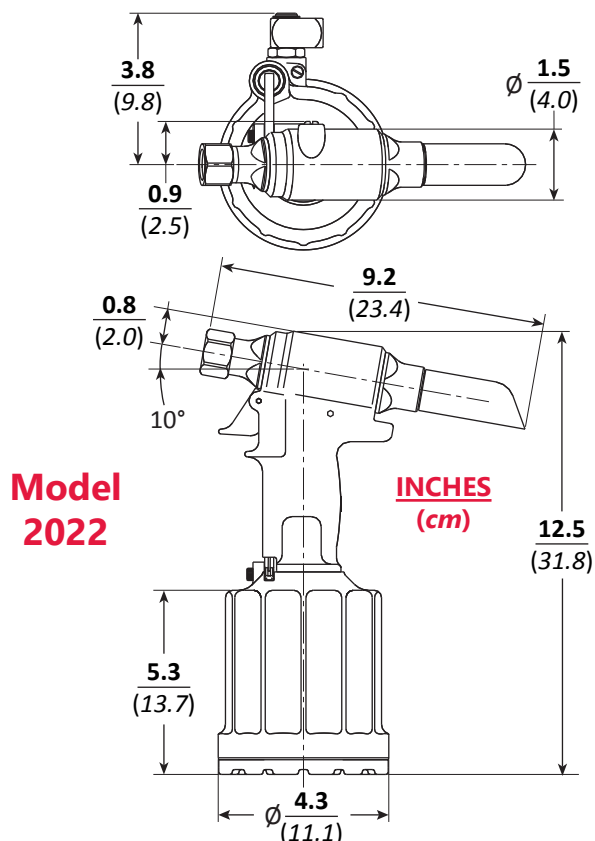



Principle of Operation

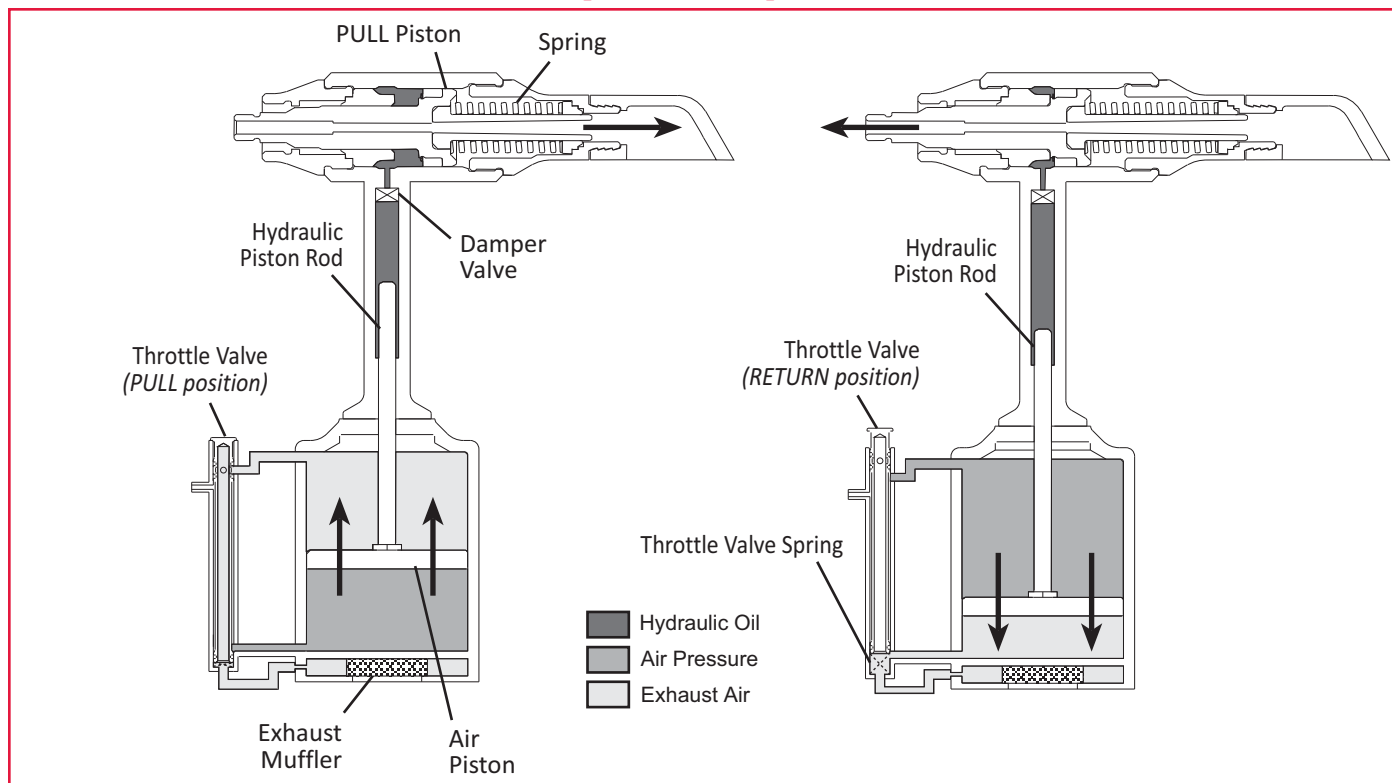

PULL STROKE

When tool is connected to the air supply, the air pressure holds the throttle valve in the up (RETURN) position; air pressure is directed to the top of the air piston, keeping it down. When the trigger is pressed, the throttle valve moves down to the PULL position, and pressurized air is directed to the bottom of the air piston, causing it to move upward. The air above the air piston is exhausted and directed through the center of the throttle valve and out the bottom of the tool (through the muffler).

As the hydraulic piston rod moves upward, a column of pressurized fluid is forced into head, which moves the pull piston rearward. The attached nose assembly moves with the pull piston to start fastener installation.

RETURN STROKE

When fastener installation is completed, the trigger is released. Air pressure, with the assistance of a spring, sends the throttle valve to the up (RETURN) position. Pressurized air is re-directed to the top of the air piston (see above), causing it and the hydraulic piston rod to move downward.

The air from below the piston is exhausted through the bottom of the tool. The piston and hydraulic piston rod move downward, hydraulic pressure is reversed, and the pull piston is returned forward.



Preparation for Use



WARNINGS:

As applicable, do NOT use without deflection or pintail bottles.

If deflection are removed or damaged, separated pintails may eject forcibly from rear of tool. Unshielded eyes, especially, may be permanently injured. Other severe injuries can be caused by flying pintails. If there is any chance of a projectile-like ejection, always point rear of tool in a safe direction, or be sure there is some structure that will stop ejecting pintails.



WARNING: To avoid pinch points, be sure there is adequate clearance for tool and operator's hands before proceeding. Tool moving toward structure may crush hands or fingers between tool and structure if clearance is limited.

The 2022 and ERT9 tools ship with a plug in the air inlet connector. The connector has 1/4"-18 female pipe threads to accept the air-hose fitting. Howmet recommends quick-disconnect fittings and a 1/4" inside-diameter air hose. The air supply should have a filter-regulator-lubricator unit and access to 90 psi (6.2 bar), capable of a flow rate of 8.5 CFM (241 l/m). **NOTE: Quick-disconnect fittings and air hoses are not available for purchase from Howmet Aerospace, Inc. Howmet includes an air hose (P/N 115436) to facilitate immediate tool use.**

1. Remove the shipping plug from air inlet connector and add a few drops of an approved hydraulic fluid.
2. Apply Parker Threadmate®, Loctite® 567, or Slic-Tite® (per manufacturer's instructions) to quick-disconnect fittings; screw the quick-disconnect



CAUTION: Do not use TEFLON® tape on pipe threads. Tape can shred and break free into fluid lines, resulting in malfunctions.

fitting into the air inlet connector.

3. Set the air pressure on the regulator to 90 psi (6.2 bar), and connect the air hose to the air inlet connector and the tool.
4. Press and release the trigger a few times to cycle the tool.
5. Disconnect the air hose from the tool, and

remove the retaining nut. Select the proper nose assembly for the fastener being installed.

6. Screw the collet assembly (including the lock collar and shim if applicable) onto the spindle and tighten with a wrench.
7. Slide the anvil over the collet assembly and into the counterbore. Slide the retaining nut over the anvil, and screw the nut onto the head.
NOTE: The retaining nut is not required for the ERT9 tool.
8. Connect the air hose to the tool and install fasteners in a test plate of proper thickness with proper size holes. Inspect the fasteners.

If the fasteners do not pass inspection, consult the **TROUBLESHOOTING** section to investigate possible causes.

NOTE: On older nose assemblies with lock collars, use Loctite® 243™ on collet threads, because the 2022 pull piston does not have staking holes. Refer to the nose assembly drawings that shipped with nose assemblies.

Threadmate is a registered trademark of Parker Intangibles, LLC.

Loctite is a registered trademark of Henkel Corporation, U.S.A.

Slic-tite is a registered trademark of LA-CO Industries, Inc.

TEFLON is a registered trademark of E. I. du Pont de Nemours and Company.



Operating Instructions

Read all of these instructions in order to ensure the safe operation of this equipment.



WARNINGS:

Inspect tools for damage and wear before using. Do not use if damaged or worn; serious personal injury may occur.

Pulling a pin without a collar, or with collar chamfer against workpiece, may result in the pin becoming a high-speed projectile when the pin grooves are stripped or the pintail breaks off. Serious personal injury may occur to anyone in the pin's "flight path." This includes pins that ricochet.

Broken pintails eject from the deflector with speed and force. To reduce the risk of serious personal injury, be sure the pintail deflector is properly attached and directed away from all personnel. Replace damaged pintail deflectors.



WARNINGS:

Wear approved eye and hearing protection.

Ensure adequate clearance for operator's hands before installing fasteners.

Be sure that the pintail deflector is properly attached to the tool and directed away from all personnel.

Do not pull on a pin without placing a fastener in a workpiece. Make sure that the collar chamfer is out, towards the tool. Pins eject with great velocity when pnntails break off or teeth/grooves strip, which could cause serious injury.

This section details installing MAGNA-GRIP® and Howmet Blind Fasteners. Review all CAUTIONs and WARNINGs prior to installing these fasteners. If the tool malfunctions, consult the **TROUBLESHOOTING** section before attempting any repairs.

NOTE: *Reasonable care of tools by operators is an important factor in maintaining efficiency and reducing downtime.*

TO INSTALL A MAGNA-GRIP FASTENER:



CAUTION: Make sure the tool is properly re-assembled before use.



CAUTION: Remove excess gap from between the sheets to permit proper fastener installation and prevent jaw damage. ALL jaw teeth must engage the pintail to avoid damaging the teeth.

1. Place a pin in the workpiece and place the collar over the pin.
NOTE: *If the collar has one tapered end, that end must be out toward tool; not next to the sheet.*
2. Hold the pin in the hole and push the nose assembly onto the pin protruding through the collar until the nose anvil touches the collar.
3. Press and hold the trigger until the collar is swaged and the pintail breaks.
4. Release the trigger; the tool will perform its RETURN stroke.

The pressure is re-directed; the piston moves forward; and the tool is pushed off the fastener and ready for the next installation cycle.

TO INSTALL A HOWMET BLIND FASTENER:



CAUTIONS:

To avoid structural and tool damage, be sure there is sufficient clearance for the nose assembly at full stroke.

Remove excess gap from between the sheets to permit proper fastener installation and prevent jaw damage. ALL jaw teeth must engage the pintail to avoid damaging the teeth.

1. Place a fastener in the workpiece or in the end of the nose assembly.
NOTE: *The tool or nose assembly must be held against, and at a right angle (90°) to, the workpiece.*
2. Press and hold the trigger until the fastener is installed and the pintail breaks.
3. Release the trigger; the tool will perform its RETURN stroke.

The pressure is re-directed; the piston moves forward; and the tool is pushed off the fastener and ready for the next installation cycle.

For complete safety information, see page 4.



Maintenance

GENERAL

The operating efficiency of your tool is directly related to the performance of the entire system. Regular inspection and the immediate correction of minor problems will keep the tool operating efficiently, and prevent downtime. A schedule of "preventive" maintenance of the tool, nose assembly, hoses, trigger and control cord, and POWERIG® will ensure your tool's proper operation and extend its life.

NOTE: *This Howmet tool should be serviced only by personnel who are thoroughly familiar with its operation.*

- Service the tool in a clean, well-lighted area. Take special care to prevent contamination of pneumatic and hydraulic systems.
- Have available all necessary hand tools (standard and special), a brass drift and wood block, and a soft-jaw vise. See KITS & ACCESSORIES.
- Carefully handle all parts. Before reassembly, examine them for damage and wear.



CAUTION: Replace all seals, wipers, and rings when the tool is disassembled for any reason, and at regular intervals, depending on severity and duration of use.

- Disassemble and assemble tool components in a straight line. Do NOT bend, cock, twist, or apply undue force.
- Have the appropriate Spare Parts Service Kit (2022KIT or ERT9KIT) available when servicing the tool; it includes important perishable parts. Other components, as experience dictates, should also be available. See KITS & ACCESSORIES.
- Apply Loctite® 243 Threadlocker (Howmet P/N 508567) to gland threads. Apply Loctite® 271-05 (Howmet P/N 503657) to nuts and locknut (P/N 505420); torque to 25–30 ft.-lbs.
- Smear LUBRIPLATE® 130-AA (Howmet P/N 502723) or SUPER-O-LUBE® (Howmet P/N 505476) on rings and mating parts to ease assembly.
- Apply Parker Threadmate®, Loctite® 567, or Slic-Tite® (per manufacturer's instructions) to male pipe threads and quick-disconnect fittings.



CAUTION: Do not use TEFLON® tape on pipe threads. Tape can shred and break free into fluid lines, resulting in malfunctions.

For supplementary information, see TROUBLESHOOTING, and the DISASSEMBLY and ASSEMBLY procedures in this manual.

DAILY

- Howmet recommends using a filter-regulator-lubricator unit. If one is not being used, uncouple the air disconnects and add a few drops of hydraulic fluid or a light-weight oil to the air inlet of the tool.
NOTE: *If the tool is in continuous use, add a few drops of fluid every 2–3 hours.*
- Before connecting an air hose to the tool, clear the air lines of dirt and water.
- Check all hoses and couplings for damage and air leaks; tighten or replace if necessary.
- Check the tool and nose assembly for damage and air or hydraulic leaks; tighten, repair, or replace if necessary.
- Inspect the tool, hoses, and POWERIG during operation to detect abnormal heating, leaks, or vibration.
- Clean nose assemblies in mineral spirits to clear jaws and rinse metal chips and dirt. For a more thorough cleaning, disassemble the nose assembly. Use a pointed "pick" to remove imbedded particles



CAUTION: Damaged jaw teeth, or debris packed between teeth, will result in fasteners not being installed or being improperly installed.

from the pull grooves of the jaws.

Clean all parts of any assembly with UNITIZED™ Jaws in mineral spirits or isopropyl alcohol only; do not let jaws come in contact with other solvents. Do not let jaws soak; dry them *immediately* after cleaning. Howmet recommends drying other parts before re-assembling.

WEEKLY

- Disassemble, clean, and re-assemble nose assembly in accordance with applicable instructions.
- Check the tool and all connecting parts for damage and fluid/air leaks; tighten or replace if necessary.

Loctite is a registered trademark of Henkel Corporation, U.S.A.
LUBRIPLATE is a registered trademark of Fiske Brothers Refining Co.
SUPER-O-LUBE is a registered trademark of Parker Hannifin Corp.
Threadmate is a registered trademark of Parker Intangibles, LLC.
Slic-tite is a registered trademark of LA-CO Industries, Inc.
Teflon is a registered trademark of E. I. du Pont de Nemours and Company.



Disassembly



WARNING: Disconnect the air hose from the tool before performing any maintenance. Serious personal injury could result if the air hose is connected.

GENERAL


This procedure is for complete disassembly of the tool. Disassemble only those components necessary to replace damaged O-rings, Quad-rings, Back-up rings, and worn or damaged components. For component identification, see Figures 1, 2, & 14.



CAUTION: Always use a soft-jaw vise to avoid damaging the tool.

1. Disconnect the tool from the air source.
2. Unscrew the retaining nut (2022 models only) and remove the nose assembly. (Follow the instructions on the *Nose Assembly Data Sheet*.)
3. Unscrew the bleed plug from top of the handle/head. Turn over the tool and drain the fluid into a container. (The tool can be cycled to clear more completely.) Discard the fluid. (Figure 1)

FIGURE 1

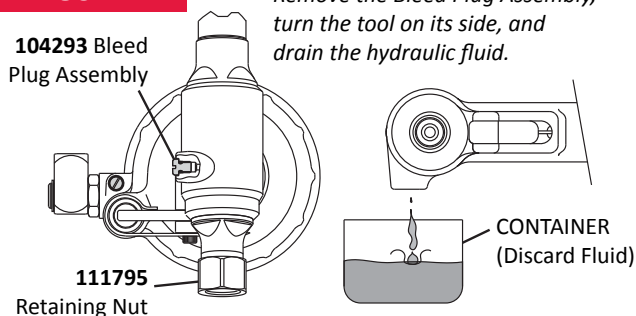

4. Models 2022 & 2022L: Pull the pintail deflector off the end cap.
Models 2022V, 2022LV, & ERT9V: See PINTAIL BOTTLE/VACUUM SYSTEM DISASSEMBLY.
5. Remove the throttle arm pivot screw and lift out the throttle arm. Disconnect the ball end of the cable assembly from it. Remove the spring from the throttle valve. (Figure 14)
6. Secure the tool upside-down in a soft-jaw vise; use a 1/8" hex key to remove three button-head screws from the muffler end cap. Remove the muffler end cap and bottom exhaust gasket, and remove the muffler from the end cap. (Figure 2)
7. Tap down the cylinder head with a soft mallet (to take pressure off the ring), and remove the retaining ring.
8. Screw the button-head screws into cylinder head; (Figure 2) carefully pry on screws to remove head.



CAUTION: Take care to not scratch the piston rod or cylinder when removing.

9. Pull on lock nut with vise-grips to remove the air piston from cylinder. Remove the piston Quad-ring.
- NOTE:** Do NOT disassemble the air piston and rod assembly. If the locknut loosens, apply Loctite® 271-05 and tighten to 25-30 ft.-lbs.
10. Remove the bumper from the gland assembly. Unscrew the gland assembly with a 1-3/8" socket wrench and extension.
11. Remove the retaining ring from the gland, and then pull out the spacer and Polyseal. Remove the O-rings, Quad-ring, and Back-up ring. Lift the cylinder assembly from the handle/head. (Figure 2)
12. Turn over the tool and drain the fluid into a container; discard the fluid. Remove the throttle valve from the air cylinder, and remove the O-rings. (Figure 2)

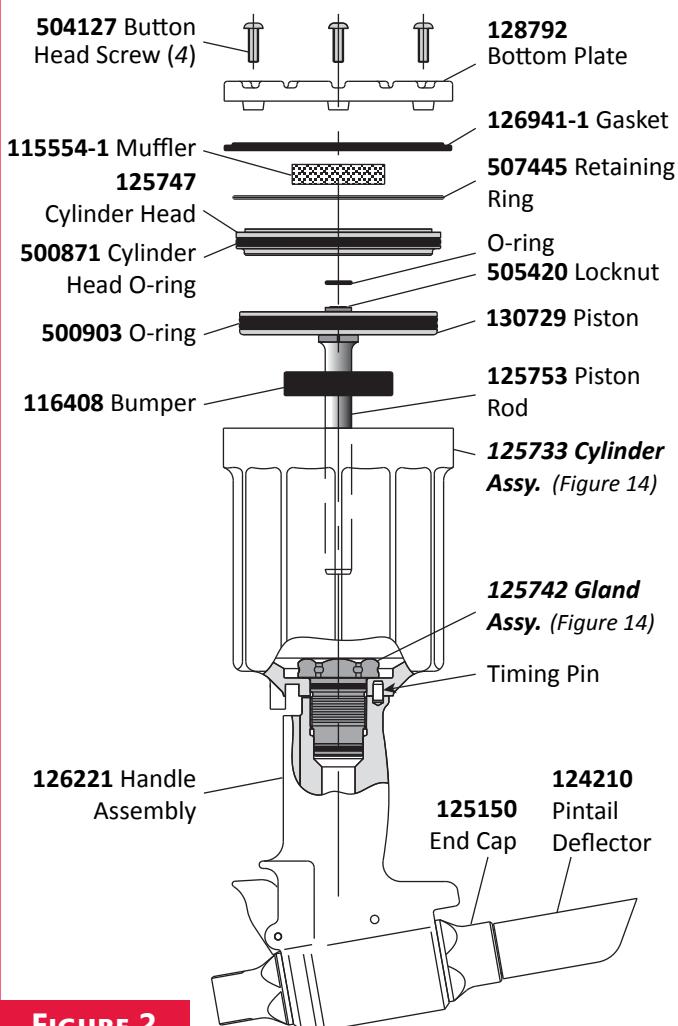


FIGURE 2




DISASSEMBLY (CONTINUED)


HEAD/HANDLE

This procedure is applicable to models 2022 and 2022L. For component identification, see Figures 3, 4, & 15.

For models 2022V, 2022LV, & ERT9V, see PINTAIL BOTTLE/VACUUM SYSTEM DISASSEMBLY.

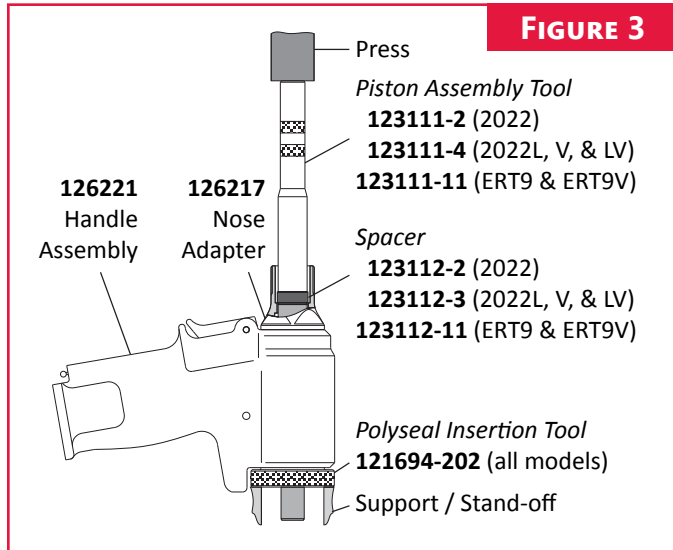


1. Unscrew the end cap; remove the spring, spacer, and wiper seal. (Figure 16)
2. Thread the Polyseal Insertion Tool into the rear of the handle/head. (Figure 3)
3. (P/Ns in Figure 3) Slide the spacer onto the piston. Thread the Piston Assembly Tool onto the piston.
4. Push the piston and front gland assemblies out the back of the handle/head. Allow clearance, with stand-off, as the piston leaves the tool. (Figure 4)

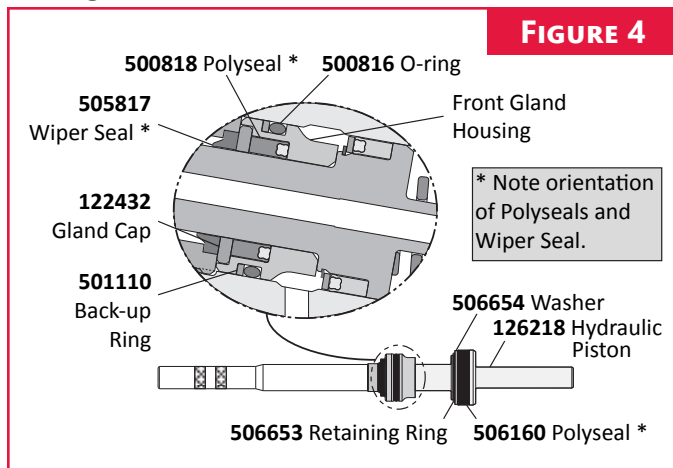

5. Un-thread the Piston Assembly Tool and remove Spacer from the piston. Re-thread the Piston Assembly Tool onto the piston, then slide the front gland assembly off the piston. (Figure 4)

6. Remove the Piston Assembly Tool from the piston, and remove the Polyseal Insertion Tool from the rear of the head/handle.
7. Remove the retaining ring, washer, and Polyseal from the hydraulic piston. (Figure 4)
NOTE: Inspect the hydraulic piston for wear, scoring, and damage; replace if necessary.
8. Unscrew the nose adapter. (Figure 15) Inspect all seals and parts.
9. If the trigger cable assembly is damaged, remove it by driving the pin out with a punch. Remove the dowel pin to disconnect the cable from the trigger.

PINTAIL BOTTLE/VACUUM SYSTEM DISASSEMBLY

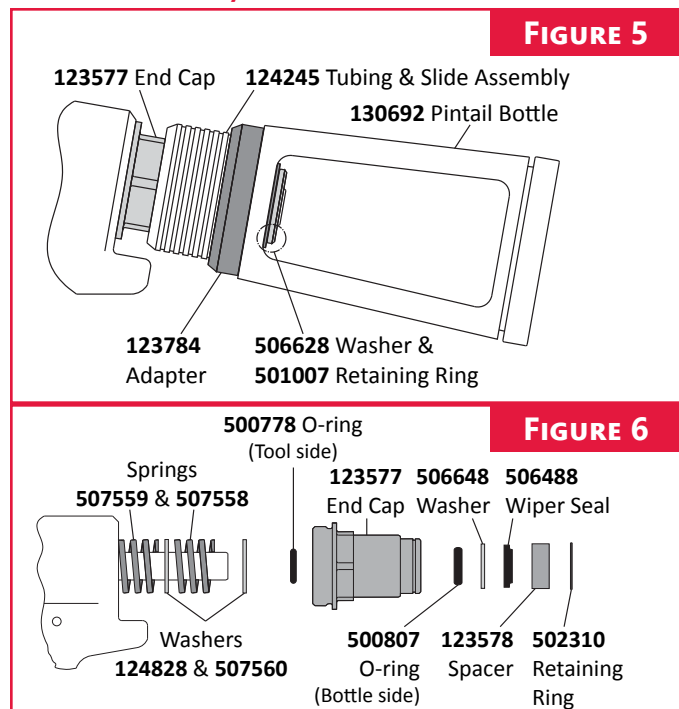

This procedure is applicable to models 2022V, 2022LV and ERT9V only; it should be used in conjunction with the previous sections, GENERAL and HEAD/HANDLE. For component identification, see Figures 5, 6, & 15.

1. Reach through the window of pintail bottle and remove the retaining ring and washer. (Figure 5)
2. Remove the pintail bottle, and then disconnect the tube from the tubing connector. (Figure 15)
3. Remove the adapter and Tubing & Slide Assembly. Then remove the end cap.
4. Remove the O-ring, washers, and spacer from the tool side of the end cap. Remove the retaining ring, wiper housing, wiper seal, washer, and O-ring from the bottle side of the end cap. (Figure 6)
5. Remove the O-rings from inside the adapter and Tubing & Slide Assembly. (Figure 15)



ASSEMBLY

HEAD/HANDLE

This procedure is for the assembly of the head/handle of models 2022, 2022L, and ERT9. For component identification, see Figures 7, 8, & 15. For models 2022V, 2022LV, and ERT9V, see PINTAIL BOTTLE/VACUUM SYSTEM ASSEMBLY.

PRIOR TO RE-ASSEMBLING THE TOOL:

- Clean components with mineral spirits or a similar solvent. Inspect for wear/damage and replace as necessary.



CAUTION: Always replace all seals, wipers, and rings of disassembled components; these parts wear out over time. Replacement minimizes problems.

- Use the O-rings, Quad-rings, and Back-up rings from Howmet Service Parts Kits (P/N 2022KIT or ERT9KIT). When assembling the tool, take care not to damage O-rings, Quad-rings, Back-up rings.

Smear LUBRIPLATE® 130-AA (Howmet P/N 502723) or SUPER-O-LUBE® (Howmet P/N 505476) on rings and mating parts to ease assembly.


TO RE-ASSEMBLE THE TOOL:

1. If removed, position the cable assembly in the trigger slot and slide the dowel pin through the holes in trigger-and-cable assembly. Position the assembled trigger in the handle and drive the pin through the holes in the handle and trigger. (Figure 15)
2. Screw nose adapter into head and tighten.
3. Thread the Polyseal Insertion Tool (P/N 121694-202) into the head. (Figure 8)
4. Assemble the piston, Polyseal, washer, and retaining ring. (Note the orientation of the Polyseal

in Figure 7.)

5. Assemble the front gland, O-ring, Back-up ring, Polyseal, wiper, and gland cap. (Note the orientation of the wiper and Polyseal in upper part of Figure 7.)
6. Thread the Piston Assembly Tool (P/Ns in Figure 7) onto the piston. Slide the complete gland assembly and wiper the onto piston.
7. Use a press to gently install the assembled


FIGURE 8

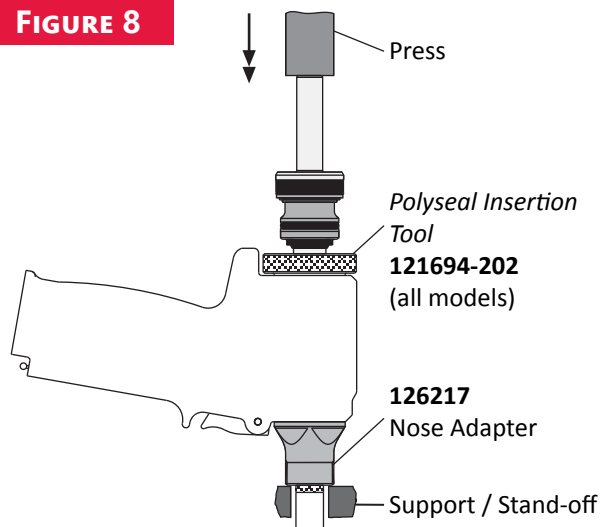

components through the rear of the tool. (Figure 8)

8. Remove the Piston Assembly Tool and the Polyseal Insertion Tool.
9. Install the rear wiper seal into the end cap. (Figure 15)
10. Slide the washers and springs into the end cap (Figure 15), and then thread the end cap assembly into the rear of the head.

FIGURE 7

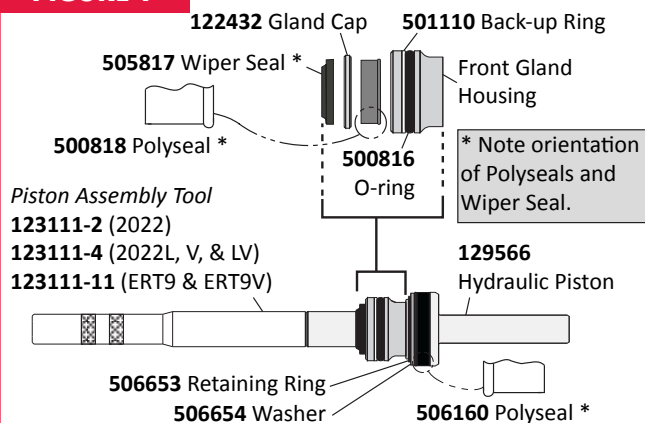

continued...



ASSEMBLY (CONTINUED)

GENERAL

For component identification, see Figures 2, 7, 14, & 15.

1. Secure the head/handle upside-down in a soft-jaw vise. (Figure 2) Place the inverted cylinder assembly on the base of the handle. (*The timing pin maintains orientation.*)
2. Assemble the gland assembly with new seals. (*Note the orientation of the Polyseal in Figure 7.*) Apply Loctite® 243™ to the threads of the gland assembly. Screw the gland assembly into the handle/head. Use a 1-3/8" socket wrench to tighten and torque to 36–66 ft.-lbs.
3. Push the bumper firmly over the gland.
NOTE: *The side of the bumper with two slots must face the bottom of the tool.*
4. Install the Quad-ring onto the air piston.
5. Clean the piston rod threads and apply Loctite® 243™. Press the assembled air piston/rod into the cylinder just enough to allow installation of the cylinder head.
6. Install the O-ring on the cylinder head and then push the cylinder head squarely into the cylinder, taking care not to damage O-ring. Install the retaining ring; align the screw holes with the muffler end cap.
7. Position the muffler in center of cylinder head. Position the gasket on the cylinder. (Figure 2)
8. Carefully position the bottom plate on the cylinder.
NOTE: *Make sure the muffler is properly positioned in the recess of the bottom plate. (Figures 2 & 14)*
9. Secure the bottom plate with the three button head screws using a 1/8" hex key. (Figure 2)
10. Assemble O-rings on throttle valve. (Figure 14)
11. Place the tool upright on a level surface. Drop the spring into the throttle valve bore in the cylinder, and push the throttle valve into the cylinder.
12. Place the ball end of the throttle cable into the end of the throttle arm, then slide the throttle arm into the slot on the cylinder. (Figure 14)

13. Snap the lever guard in place, and install the pivot screw in the cylinder to retain the throttle arm.

14. **Models 2022 & 2022L:** Push the pintail deflector onto the end cap.

Model ERT9: Position the adapter and pintail bottle on the end cap. Reach in the window of the pintail bottle and install the retaining ring and washer. (Figures 14 & 15)

Models 2022V, 2022LV, & ERT9V: See **PINTAIL BOTTLE/VACUUM SYSTEM ASSEMBLY**.

The tool is now assembled and must be filled with hydraulic fluid prior to use. See the **FILL AND BLEED** section. **NOTE:** *Install the bleed plug and O-ring assembly after that process.*

PINTAIL BOTTLE/VACUUM SYSTEM ASSEMBLY

This procedure is applicable to models 2022V, 2022LV, & ERT9V only; it should be used in conjunction with the previous sections, **GENERAL** and **HEAD/HANDLE**. For component identification, see Figures 5, 6, & 16.

1. Assemble adapter and Tubing & Slide Assembly and new O-rings.
2. From the bottle side of the end cap, install O-ring, washer, wiper seal, spacer, and retaining ring as shown in Figure 6.
3. From the tool side of the end cap, install O-ring, washer, and spring. (Figure 6) Screw the entire assembly into the head; tighten.
4. Assemble the Tubing & Slide Assembly and O-rings; slide the complete assembly onto the end cap, and push the tube into the connector. (Figure 16)
5. Position the adapter and pintail bottle on the end cap. (Figures 5 & 16)
6. Reach through the window of the pintail bottle, and install the washer and retaining ring as shown in Figure 5.

Loctite is a registered trademark of Henkel Corporation, U.S.A.

LUBRIPLATE is a registered trademark of Fiske Brothers Refining Co.

SUPER-O-LUBE is a registered trademark of Parker Hannifin Corp.



FILL AND BLEED

This section documents the “bleed-&-fill” procedure. For component identification, see Figures 9, 10, & 11.

REQUIRED EQUIPMENT

- DEXRON® III or equivalent ATF (See



WARNING: Avoid contact with hydraulic fluid. Hydraulic fluid must be disposed of in accordance with local regulations. See MSDS for hydraulic fluid shipped with tool.

SPECIFICATIONS for more information.)

- Shop air-line with 90 psi (6.2 bar) max.
- Air regulator
- Fill Bottle Assembly (P/N 120337, included with tool)
- Large flat-blade screwdriver
- Stall Nut (P/N 124090 or 125340, optional)
- Nose assembly
- Fasteners (optional)

PREPARATION

- Install air regulator in the air-line and set the pressure to 20–40 psi (1.4–2.8 bar).
- Add an approved hydraulic fluid to the fill point

120337 Fill Bottle Assy

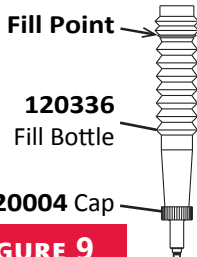


FIGURE 9



CAUTION: All fluid must be purged from the tool before refilling. The tool stroke will be diminished if the fluid is aerated. For optimal performance, refill with a fluid that is recommended in SPECIFICATIONS.

of the fill bottle.

TO BLEED AND FILL THE TOOL:

1. Lay the tool on its side with the fill port facing up and remove the bleed plug from the fill port.
2. Connect the tool to shop air-line. If fluid is present, hold the tool over a suitable container with fill port facing into container. Cycle the tool



WARNING: Air pressure must be set at 20–40 psi (1.4–2.8 bar) to prevent possible injury from high-pressure spray.

If the bleed plug is removed, the fill bottle must be in place before cycling the tool.

several times to drain old fluid, air, and foam. (Figure 10)

3. Screw the fill bottle into the fill port.
4. Stand the tool upright on a bench. Trigger the tool slowly (20–30 cycles), and bend the fill bottle at a right-angle (90°) to the tool. (Figure

FIGURE 10


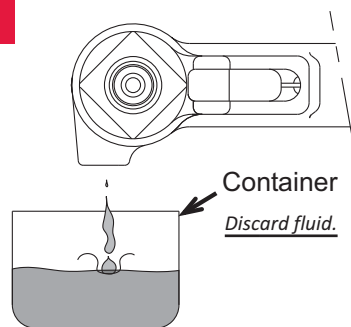


FIGURE 11

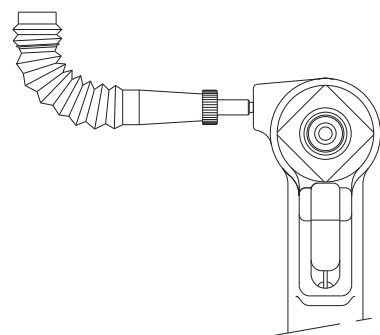

11)

5. When air bubbles stop accumulating at top of the bottle, stop cycling the tool. When the trigger is released, the pull piston returns to the idle position (full-forward).
6. Disconnect the tool from the air-line. Lay the tool on its side and remove the fill bottle. Top off the fluid in the fill port, and install and tighten the bleed plug.
7. Connect the air-line to the tool and measure the stroke as described in MEASURING TOOL STROKE.
If the stroke is less than specified, remove the bleed plug and add fluid. Re-insert the bleed plug and recheck the stroke.
8. Increase the air pressure to specifications. Install two fasteners to check the function and installation in a single stroke, or cycle the tool with a stall nut fully threaded onto the piston to load up the tool. Measure the stroke again. Remove the plug and add fluid. Re-insert the plug, and cycle and measure again. Repeat this process until the stroke meets the recommended minimal length.


DEXRON is a registered trademark of General Motors Corp.



MEASURING TOOL STROKE

NOTE: Remove the Nose Assembly from the tool for both of the following procedures.

FIGURE 12

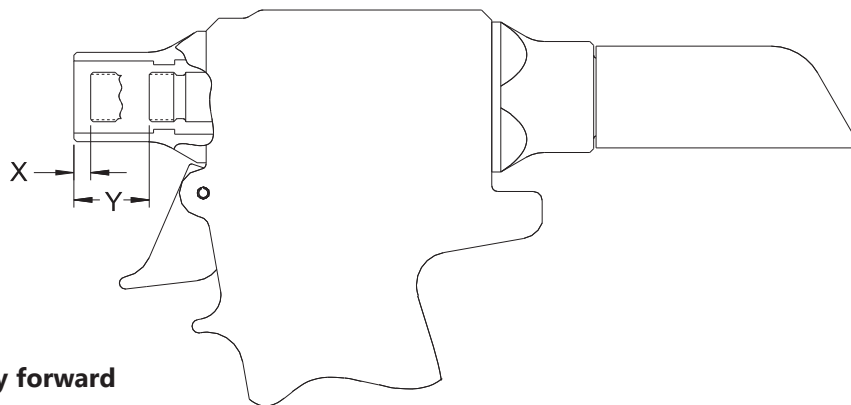


2022 & 2022V

1. Cycle the piston all the way forward and measure X.
2. Cycle and hold the piston back and measure Y.

$$\text{Stroke} = Y - X$$

If the stroke is less than 1.026 in (2.61 cm), follow the steps at the end of the **FILL AND BLEED** procedure.

FIGURE 13

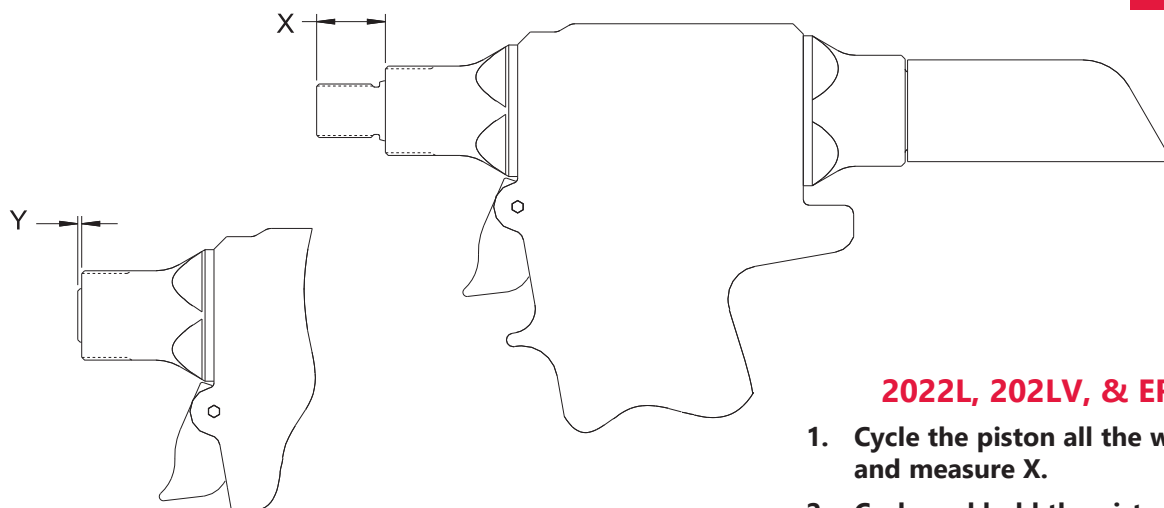

2022L, 202LV, & ERT9V


1. Cycle the piston all the way forward and measure X.
2. Cycle and hold the piston back and measure Y.

$$\text{Stroke} = X - Y$$

If the stroke is less than 1.026 in (2.61 cm), follow the steps at the end of the **FILL AND BLEED** procedure.



TOOL BASE COMPONENTS (ALL MODELS)

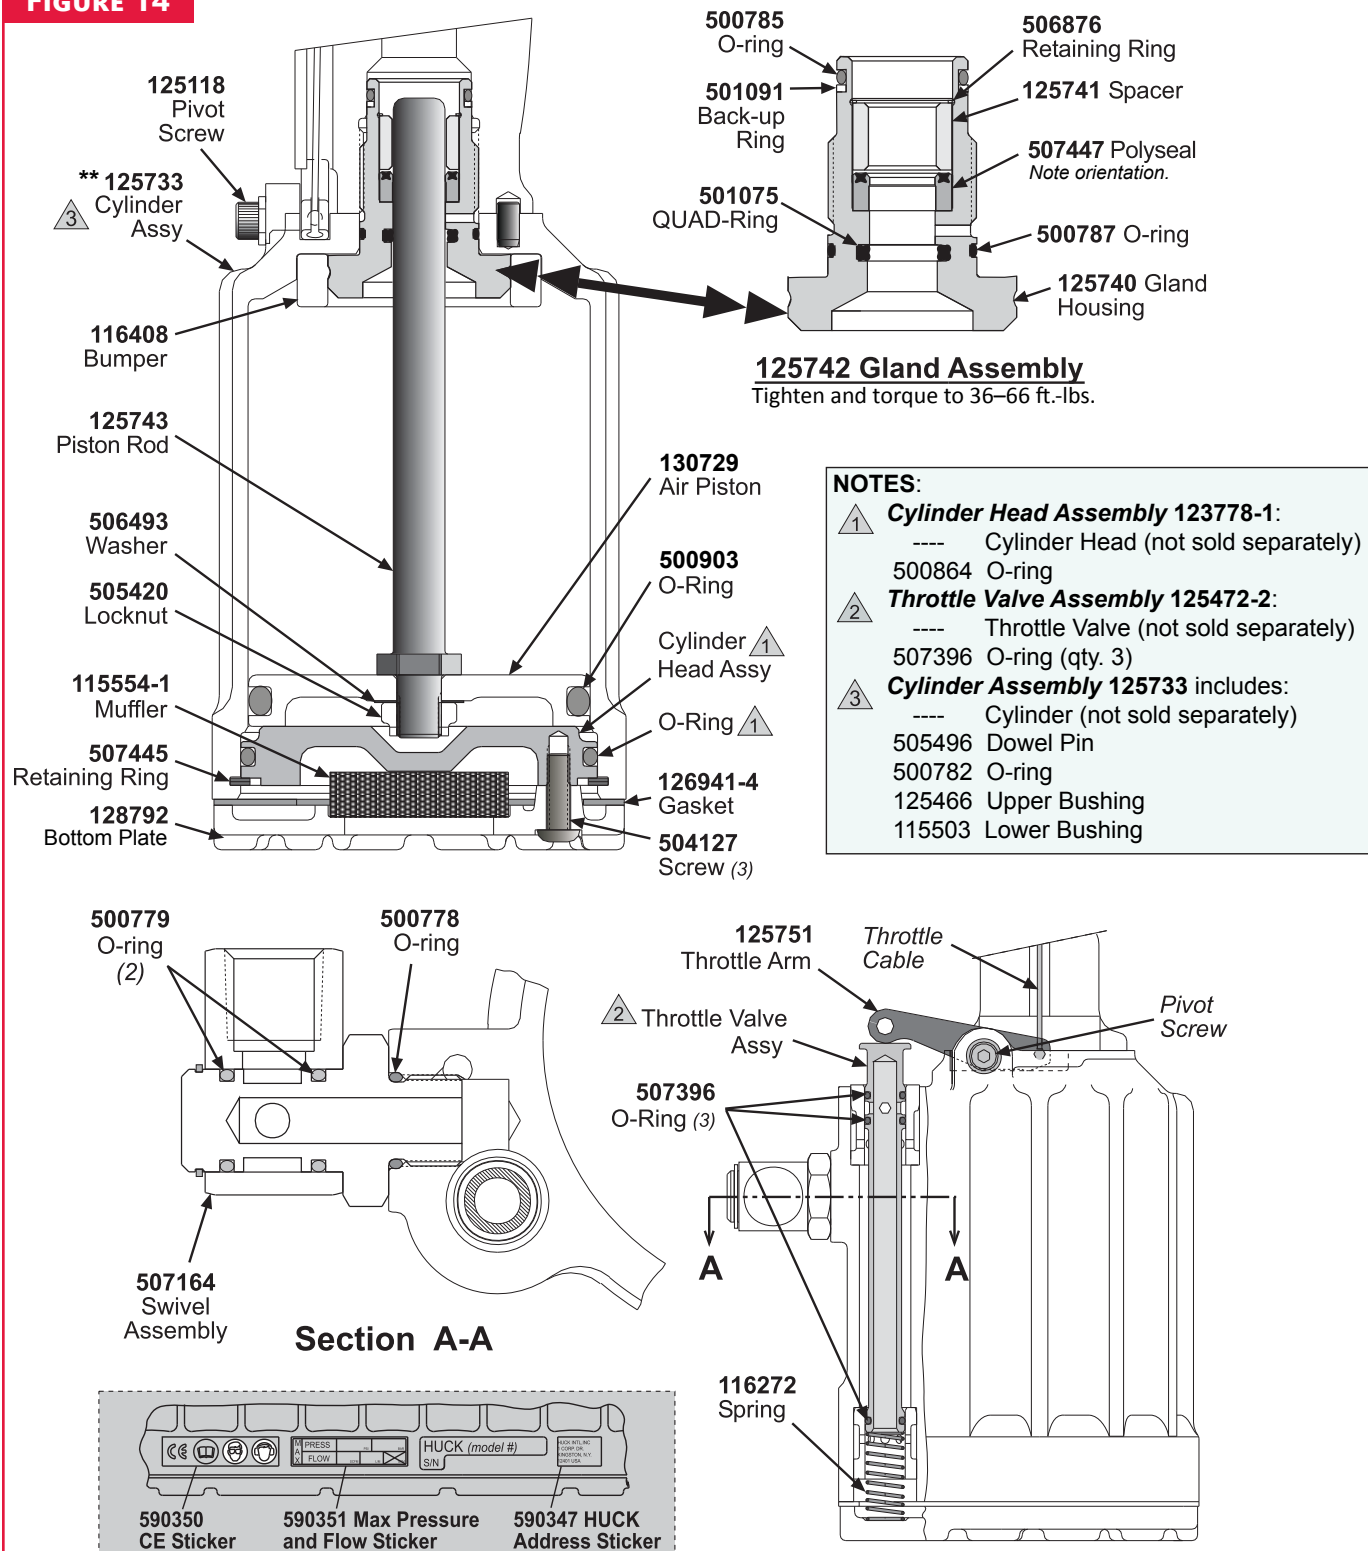FIGURE 14


**** When replacing the Cylinder Assembly, these stickers MUST be ordered and placed as shown.**




HEAD/HANDLE 2022, 2022L, ERT9

FIGURE 15

NOTES

- 1 Piston is not sold separately. It can be purchased as Piston Assembly, which includes Piston, Polyseal, Retaining Ring, and Washer.
- 2 Front Gland Assembly includes Front Gland, O-ring, Back-up Ring, Polyseal, Gland Cap, and Wiper Seal.
- 3 Note orientation of Wipers and Polyseals.

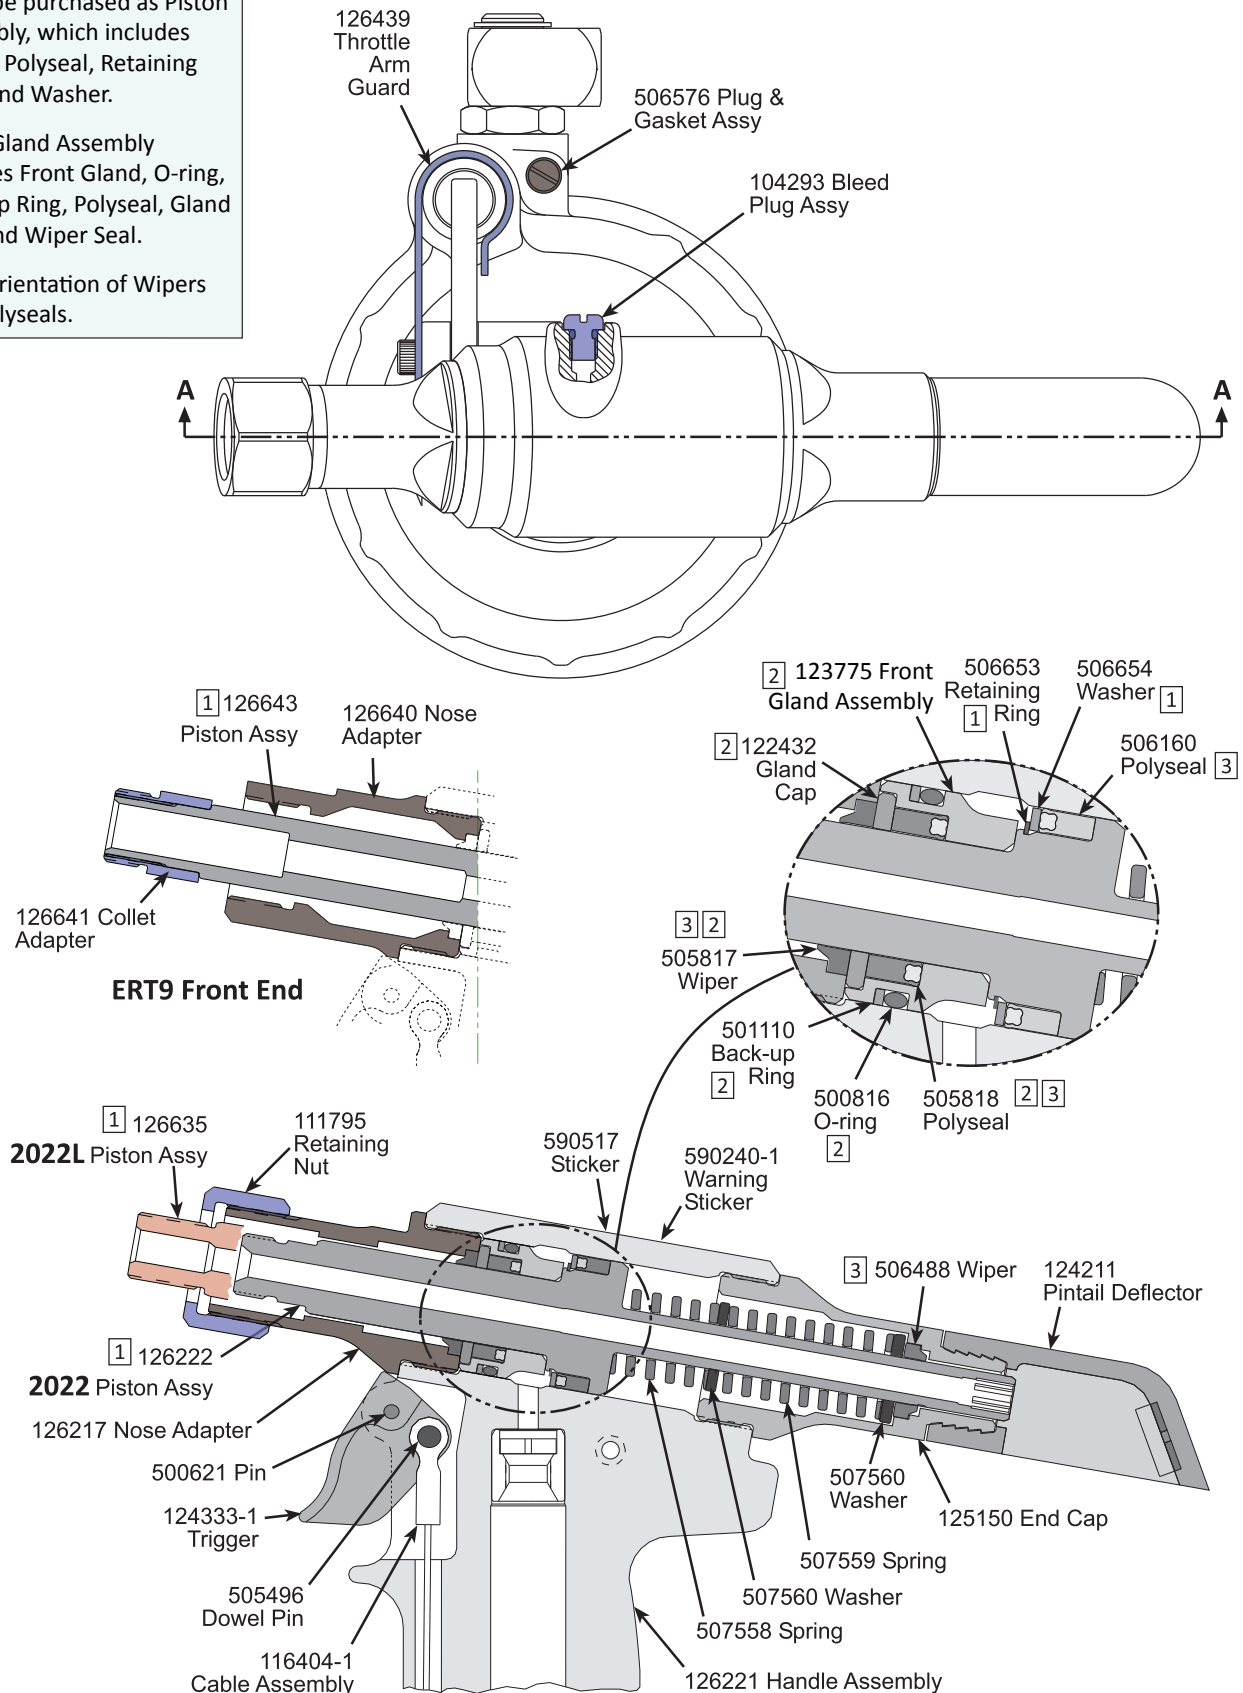




HEAD/HANDLE 2022LV, 2022V, ERT9V

FIGURE 16**NOTES**

- 1 Piston is not sold separately. It can be purchased as Piston Assembly, which includes Piston, Polyseal, Retaining Ring, and Washer.
- 2 Front Gland Assembly includes Front Gland, O-ring, Back-up Ring, Polyseal, Gland Cap, and Wiper Seal.
- 3 Note orientation of Wipers and Polyseals.

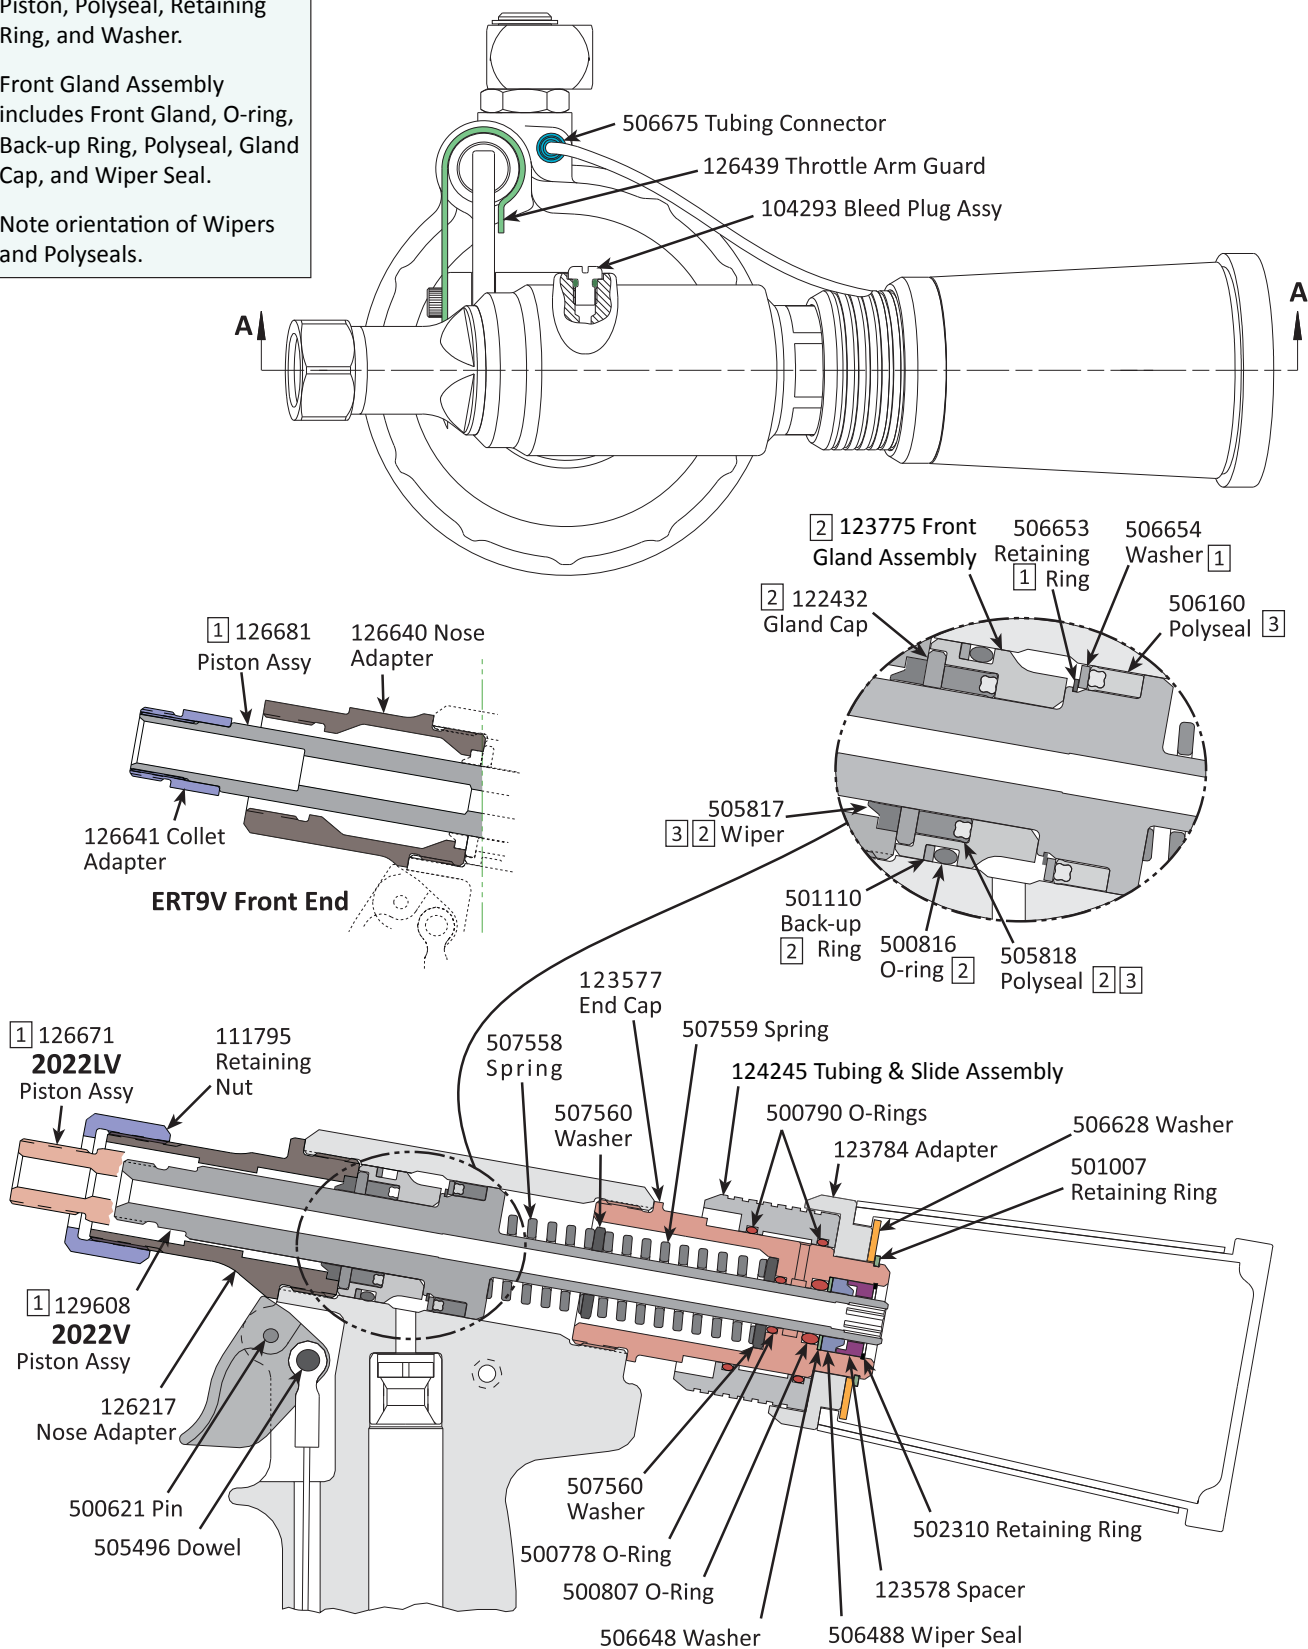



TROUBLESHOOTING

Always check the simplest possible cause (such as a loose or disconnected trigger line) of a malfunction first. Then proceed logically, eliminating other possible causes until the cause is discovered. Where possible, substitute known good parts for suspected defective parts. Use this troubleshooting information to aid in locating and correcting trouble.

1. **Tool fails to operate when trigger is pressed.**
 - a. Air-line not connected or air pressure too low.
 - b. Worn or damaged throttle valve O-rings.
 - c. Broken throttle valve cable.
2. **Tool does not complete fastener installation and break pintail.**
 - a. Air pressure too low.
 - b. Worn or damaged air piston Quad-ring.
 - c. Tool is low on hydraulic fluid. See the **FILL AND BLEED** section.
 - d. Air in hydraulic system. See the **FILL AND BLEED** section.
3. **Pintail stripped and/or swaged collar not ejected.**
 - a. Check for broken or worn jaws in nose assembly. See the appropriate *Nose Assembly Data Sheet*.
 - b. Check for worn anvil. See the appropriate *Nose Assembly Data Sheet*.
4. **Hydraulic fluid exhausts with air or leaks at base of handle.**
 - a. Worn or damaged handle gland assembly (P/N 116134-1). Inspect Polyseal and all rings. Replace if necessary.
5. **Hydraulic fluid leaks at rear of pull piston.**
 - a. Worn or damaged hydraulic piston Polyseal. Inspect Polyseal. Replace if necessary.
6. **Hydraulic fluid leaks at front of pull piston.**
 - a. Worn or damaged part in front gland. Inspect Polyseal, O-ring, and Back-up ring. Replace if necessary.
7. **Pull piston will not return.**
 - a. Throttle valve stuck; lubricate O-rings.
 - b. Throttle arm, cable, or trigger binding.
8. **Air leaks at air cylinder head.**
 - a. Worn or damaged O-ring. Replace if necessary.

KITS & ACCESSORIES

Howmet has created tool-specific Spare Parts Service Kits that contain various perishable parts. The types and quantities of spare parts that should be available vary with the application and tools in use. Have the appropriate kit accessible when using this tool and when performing maintenance on it. Howmet Assembly Tool Kits have product-specific tools that should be used when disassembling and assembling the tool.

Howmet recommends having the following Accessories available when preparing, using, and performing maintenance on this tool.

KITS

SERVICE KITS

- 2022KIT
- ERT9KIT

ASSEMBLY TOOL KIT (2022)

- 123110-2

- Polyseal Insertion Tool - 121694-202
- Piston Assembly Tool - 123111-2
- Spacer - 123112-2

ASSEMBLY TOOL KIT (2022L, V, & LV)

- 123110-4

- Polyseal Insertion Tool - 121694-202
- Piston Assembly Tool - 123111-4
- Spacer - 123112-3

ASSEMBLY TOOL KIT (ERT9 & ERT9V)

- 123110-15

- Polyseal Insertion Tool - 121694-202
- Piston Assembly Tool - 123111-11
- Spacer - 123112-11

ACCESSORIES

Stall Nut

- 124090 (2022)
- 125340 (2022L & 2022LV)
- 124090-5 (ERT9 & ERT9V)

Fill Bottle Assembly

- 120337

Pintail Bag

- 125652 (2022 & 2022L)

STANDARD TOOLS AVAILABLE FROM Howmet

- 1/8" hex key (P/N 502294), use on button-head screw (P/N 504127)
- 5/32" hex key (P/N 502295)
- Retaining Ring Pliers (P/N 502866)



Limited Warranties

Limited Lifetime Warranty on BobTail® Tools:

Howmet Aerospace, Inc. warrants to the original purchaser that its BobTail® installation tools manufactured after 12/1/2016 shall be free from defects in materials and workmanship for its **useful lifetime**. This warranty does not cover special order / non-standard products, or part failure due to normal wear, tool abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

Two Year Limited Warranty on Installation Tools:

Howmet Aerospace, Inc. warrants that its installation tools and Powerig® hydraulic power sources manufactured after December 1, 2016 shall be free from defects in materials and workmanship for a period of two years from date of purchase by the end user. This warranty does not cover special order / non-standard products, or part failure due to normal wear, tool abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

90 Day Limited Warranty on Nose Assemblies and Accessories:

Howmet Aerospace, Inc. warrants that its nose assemblies and accessories shall be free from defects in materials and workmanship for a period of 90 days from date of purchase by the end user. This warranty does not cover special clearance noses, or special order / non-standard product, or part failure due to normal wear, abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

Useful lifetime is defined as the period over which the product is expected to last physically, up to the point when replacement is required due to either normal in-service wear, or as part of a complete overhaul. Determination is made on a case-by case basis upon return of parts to Howmet Aerospace, Inc. for evaluation.

Tooling, Part(s) and Other Items not manufactured by Howmet:

Howmet makes no warranty with respect to the tooling, part(s), or other items manufactured by third parties. Howmet expressly disclaims any warranty expressed or implied, as to the condition, design, operation, merchantability, or fitness for use of any tool, part(s), or other items thereof not manufactured by Howmet. Howmet shall not be liable for any loss or damage, directly or indirectly, arising from the use of such tooling, part(s), or other items or breach of warranty or for any claim for incidental or consequential damages.

Howmet shall not be liable for any loss or damage resulting from delays or non-fulfillment of orders owing to strikes, fires, accidents, transportation companies or for any reason or reasons beyond the control of the Howmet or its suppliers.

Howmet Installation Equipment:

Howmet Aerospace, Inc. reserves the right to make changes in specifications and design and to discontinue models without notice.

Howmet Installation Equipment should be serviced by trained service technicians only.

Always give the serial number of the equipment when corresponding or ordering service parts.

Complete repair facilities are maintained by Howmet Aerospace, Inc. Please contact one of the offices listed below.

Eastern

One Corporate Drive Kingston, New York 12401-0250
Telephone (845) 331-7300 FAX (845) 334-7333

Outside USA and Canada

Contact your nearest Howmet Aerospace location (see reverse).

In addition to the above repair facilities, there are Authorized Tool Service Centers (ATSC's) located throughout the United States. These service centers offer repair services, spare parts, Service Parts Kits, Service Tool Kits and Nose Assemblies. Please contact your Howmet Representative or the nearest Howmet Aerospace location (see reverse) for the ATSC in your area.



Howmet Inc. (NYSE: HWM) creates breakthrough products that shape industries. Working in close partnership with our customers, we solve complex engineering challenges to transform the way we fly, drive, build and power.

Through the ingenuity of our people and cutting-edge advanced manufacturing, we deliver these products at a quality and efficiency that ensures customer success and shareholder value.

Howmet Fastening Systems Tooling Support Locations

INDUSTRIAL NORTH AMERICA

Kingston Operations

1 Corporate Drive
Kingston, NY 12401
Tel: +1-800-278-4825
Fax: +1-845-334-7333
hfs.sales.kingston@Howmet.com

Tracy Operations

1925 North MacArthur Drive
Tracy, CA 95376
Tel: +1-800-826-2884
Fax: +1-800-573-2645
hfs.sales.idg@Howmet.com

Waco Operations

PO Box 8117
8001 Imperial Drive
Waco, TX 76714-8117
Tel: +1-800-388-4825
Fax: +1-800-798-4825
huck.waco@Howmet.com

INDUSTRIAL GLOBAL

Tokyo Operations (Japan and Korea)

1013 Hibiya U-1 Bldg.
Uchisaiwai-cho 1-1-7
Chiyoda-ku, Tokyo
100-0011 Japan
Tel: +81-3-3539-6594
Fax: +81-3-3539-6585

Melbourne Operations

1508 Centre Road
Clayton, Victoria
Australia 3168
Tel: +613-8545-3333
Fax: +613-8545-3390
hfsmel.sales@Howmet.com

Suzhou Operations

58 Yinsheng Road,
SIP Suzhou, Jiangsu
215126 China
Tel: +86-512-62863800-8888

Telford Operations

Unit C, Stafford Park 7
Telford, Shropshire
England TF3 3BQ
Tel: +44-(0)-1952-290011
Fax: +44-(0)-1952-207701
THIsales@howmet.com

AEROSPACE NORTH AMERICA

Kingston Operations

1 Corporate Drive
Kingston, NY 12401
Tel: +1-800-278-4825
Fax: +1-845-334-7333
hfs.sales.kingston@Howmet.com

Simi Valley Operations

3990A Heritage Oak Court
Simi Valley, CA 93063
Tel: +1-805-527-3600
Fax: +1-805-527-0900
www.hfs-simivalley.com
SMV.HFSSales@Howmet.com

AEROSPACE GLOBAL

Aichach Operations

Robert-Bosch Str. 4
Aichach 86551
Germany
Tel: +49-8251-8757-0
AICSalesDL@Howmet.com

Cergy Operations

15 Rue du Petit Albi
F-95611 Cergy Pontoise
France
Tel: +33-1-34-33-98-00
Fax: +33-1-34-33-97-77

Hong Kong Operations

88 Hing Fat Street, 27th Floor
Causeway Bay
Hong Kong, China
Tel: +852-2864-2012
HKSSalesDL@howmet.com



© 2021 Howmet Aerospace, Inc.
Howmet Fastening Systems
Kingston Operations
1 Corporate Drive, Kingston, NY 12401
Tel: 800-431-3091 • Fax: 845-334-7333
www.hfsindustrial.com/us



Huck provides technical assistance regarding the use and application of Huck fasteners and tooling. **NOTICE:** The information contained in this publication is only for general guidance with regard to properties of the products shown and/or the means for selecting such products, and is not intended to create any warranty, express, implied, or statutory; all warranties are contained only in Huck's written quotations, acknowledgments, and/or purchase orders. It is recommended that the user secure specific, up-to-date data and information regarding each application and/or use of such products.